

Product Information

dermosoft® DGMC MB**The Product: dermosoft® DGMC MB**

dermosoft® DGMC MB consists of 100% plant derived, single ingredient Polyglyceryl-2 Caprate. This multifunctional raw material shows selective antimicrobial activity against gram positive bacteria and is therefore suitable as an active ingredient with deodorant properties. Furthermore **dermosoft® DGMC MB** acts as a sensory modifier in O/W emulsions and increases the viscosity in surfactant based formulations.

CHARACTERISTICS

- INCI: Polyglyceryl-2 Caprate
- Appearance: colorless to yellowish viscous liquid
- 100% naturally derived, already COSMOS approved and compliant with other standards for natural cosmetics (please contact us for further information)

Cosmetic Functions

- Hydrating: Glycolic structure can bind water molecules
- Refatting: Due to the amphiphilic structure, it delivers and retains oil components in the upper layer of the skin
- Wetting and co-emulsifying: Due to the amphiphilic structure, it lowers the surface tension between oil- and water phase, building smaller droplets and lowering the energy demand during emulsification process
- Antimicrobial activity: Selective antimicrobial efficacy against gram-positive bacteria, therefore it is perfectly suitable for products for blemished skin and deodorants
- Easy to handle: addition to the oil or water phase possible
- pH range: 4.5 – 7.0

DOSAGE

Usage	Dosage	Application properties
Antimicrobial skin active	0.3 – 0.5 %	Blemished skin, deodorant active

How to work with dermosoft® DGMC MB

MANUFACTURING PROCEDURE (LABORATORY SCALE)

For emulsions:

1. Add **dermosoft® DGMC MB** to the water or oil phase before emulsification.
2. During dissolving process: avoid heating above 80°C and pH > 7.
3. Due to its surface activity, **dermosoft® DGMC MB** may have an impact on emulsion viscosity and stability. Please consider in product development.

*Note: In combination with **dermosoft® 1388/ anisate** or alkaline presolutions, addition to the oil phase is recommended.*

For surfactant based products:

1. Dissolve **dermosoft® DGMC MB** directly into the concentrated surfactant base.
2. During dissolving process it is recommended to work below 60°C and to avoid pH > 7.

Note: Higher concentrations may cause turbidity, lower viscosity and may influence stability.

For aqueous based systems:

1. Directly dissolve **dermosoft® DGMC MB** into water with help of solubilizer or glycols.

FORMULATION ADVICE

Interactions	Lecithin or phospholipid structures can be destabilized by higher concentrations of surfactants, to avoid this – First hydrate lecithin – Add small concentrations of dermosoft® DGMC MB to the oil phase
Antimicrobial activity may be limited by	Surfactant based formulations Anionics

APPLICATION IDEAS

Perfectly suitable for natural formulations for blemished skin.


For more formulation ideas visit us at:

<https://www.dr-straetmans.de/en/products>

Proof of Performance

IN VITRO TEST: ANTIMICROBIAL EFFECTIVENESS TESTING AGAINST CORYNEBACTERIUM XEROSIS

Reduction of *Corynebacterium xerosis* after inoculation in a water/surfactant formulation (pH 4.5)

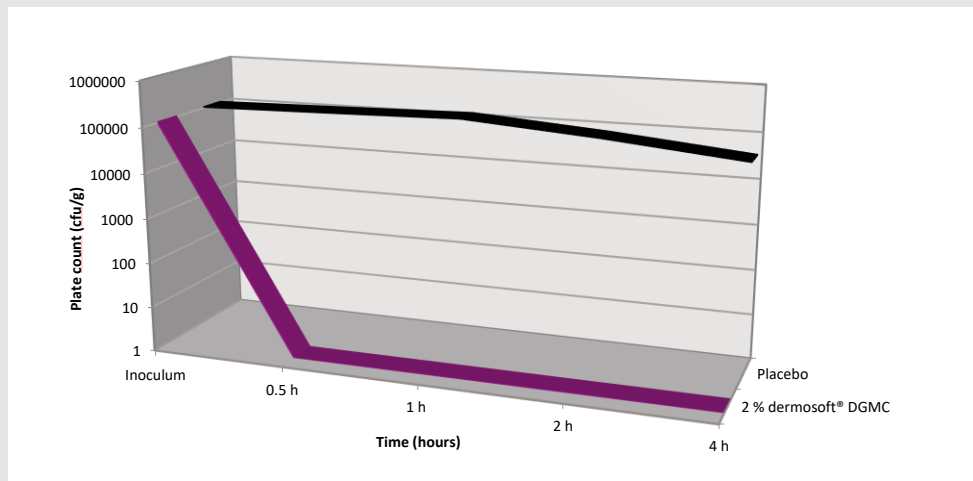

Trade Information

International Approval*	EU, USA, Canada, China, Japan, Korea, Taiwan.
Packaging	180 kg
Shelf life (<i>stored in original container</i>)	36 months

* Information is based on our best knowledge and reviewed for the most requested regions only. We recommend to check current regulatory requirements in individual target countries. For more information, refer to Product Data Record (PDR) document chapter 5.

Additional information

dermosoft® DGMC MB is in compliance with the specification given by European Food Regulation 231/2012 for food additive E 475.

For further information, please contact:
sales-drs@evonik.com

This information and all further technical advice are based on our present knowledge and experience. However, it implies no liability or other legal responsibility on our part, including with regard to existing third party intellectual property rights, especially patent rights. In particular, no warranty, whether express or implied, or guarantee of product properties in the legal sense is intended or implied. We reserve the right to make any changes according to technological progress or further developments. The customer is not released from the obligation to conduct careful inspection and testing of incoming goods. Performance of the product described herein should be verified by testing, which should be carried out only by qualified experts in the sole responsibility of a customer. Reference to trade names used by other companies is neither a recommendation, nor does it imply that similar products could not be used.

Evonik Dr. Straetmans GmbH
 Merckurring 90
 22143 Hamburg, Germany
 Phone +49 40 669356 0
 Fax +49 40 669356 310
info-drs@evonik.com
www.dr-straetmans.de/en